

## ProBox family power supply system with redundancy.

ProBox family modules may be powered-up with the following:

- An external PSU 12V DC@ 1A adapter (1.5A for some modifications) included in the kit
- **PBX-PMX0114** - an external PSU module, 12V DC@ 5A, capable to provide power for up to 8 ProBox functional modules

### Providing the redundancy

The main and the stand-by PBX-PMX0114 power supply units are to be connected to the power distribution module - the PBX-DP-8.

If either of the PSUs fails – an automatic changeover takes place.

- **PBX-PMX0114 power supply unit**

- Mains input... 110..242VAC

- Output .... 12V@ 5A DC

The PBX-PMX0114 power supply units are connected to the PBX-DP-8 power distribution module by the **DB9M-DB9M-0.5** cables.

Two such cables are included in the PBX-DP-8 kit.

- **PBX-DP-8 the eight-port power distribution module**


- Input... 12..17V DC

- Outputs ..... 8 ports with 12V...17V DC @ 2A per port maximum.

The PBX-DP-8 power distribution module provides +12 volts (redundancy-protected) at its 8 ports.

Each port connects to the load's POWER DC IN socket by the **760K-KL2-0.5** cable.

Cable to be ordered according with the number of loads.

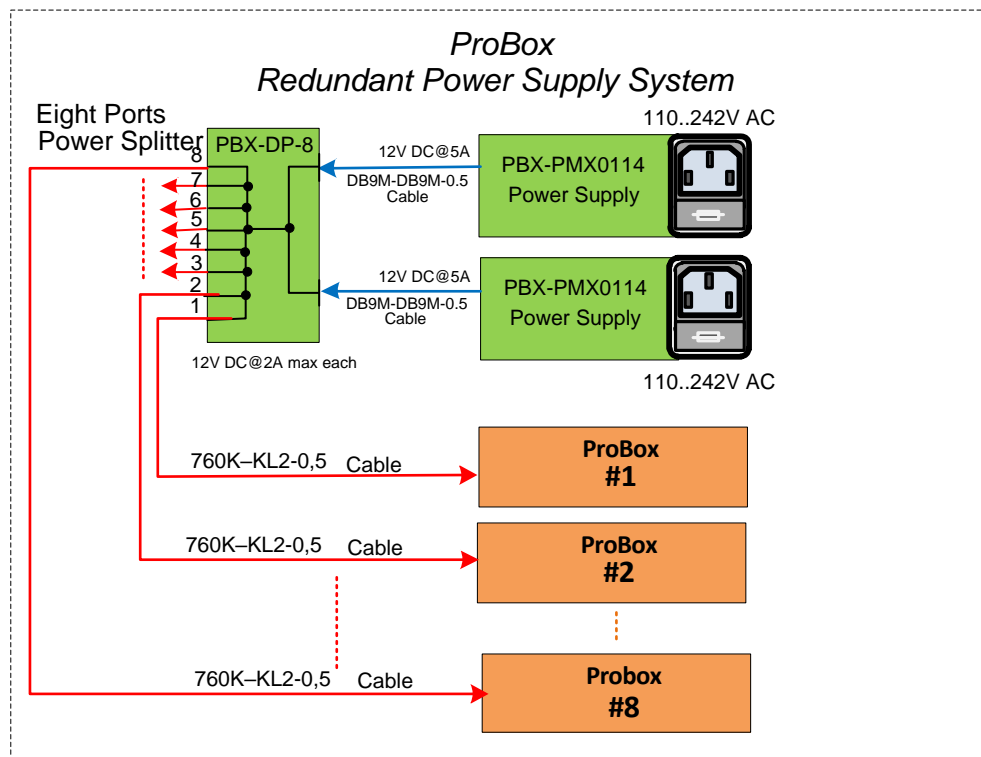

**ProBox family power system with redundancy.**